



Resetting Oil Alarm:

Mechanical Engines:

- Turn ignition on, don't start the engine.
- Remove the emergency stop switch lanyard.
- Pull out the stop switch button 3 times in 10 seconds until you hear a beep.
- Turn off the ignition switch and reinstall the stop switch lanyard.

SPC 1.0 "Fly-by-wire" Engines (2021 and earlier):

- Turn on ignition.
- Remove the emergency stop switch lanyard.
- Push the start/stop button 3 times.
- Turn off the ignition switch and reinstall the stop switch lanyard.

SPC 2.0 "Fly-by-wire" Single Engine (2022 and newer):

- Turn ignition on, don't start the engine.
- Remove the emergency stop switch lanyard.
- Pull out the stop switch button 3 times in 10 seconds until you hear a beep.
- Turn off the ignition switch and reinstall the stop switch lanyard.

SPC 2.0 "Fly-by-wire" Multi-Engines (2022 and newer):

- Turn on ignition.
- Remove the emergency stop switch lanyard.
- Push the start/stop button 3 times.
- Turn off the ignition switch and reinstall the stop switch lanyard.