

## INSPECTION AND MAINTENANCE SCHEDULE

Interval	Initial 20 hrs. or 1 month	Every 100 hrs. or 12 months	Every 200 hrs. or 12 months	Every 300 hrs. or 36 months
Spark plug	-	-1	1	1
Breather & Fuel line	1	-1	1	1
Engine oil	R	R	R	R
Gear oil	R	R	R	R
Lubrication	1	1	T.	- 1
Anodes (external)	- 1	1	l l	- 1
* Anodes (internal Powerhead)		1	1	1
Bonding wires			1	1
Battery	E	- 1	1	-1
Low pressure fuel filter	E	_1	1	- 1
	Replace every 400 hours or 2 years.			
* Low pressure fuel pump filter	Replace every 1000 hours.			
* Engine oil filter	R		R	-
* High pressure fuel filter	Replace every 1000 hours.			
* Idle speed	- 1		1	-
* Valve lash	_	2		1
* Water pump	1 =	-	1	-
* Water pump impeller	-	-	1	R
* Propeller nut & pin	1	- 1	1	- 1
* Bolts & Nuts	т	T	T	T
* Pinion/gear set	Inspection every 200 hours. (This item is applicable only for commercial motors.)			

I: Inspect and clean, adjust, lubricate, or replace, if necessary T: Tighten R: Replace

Thermostat.